

SAM Sinner



USER MANUAL

Content

Content.....	1
Specifications.....	2
General Overview.....	3
Lifting up the turntable.....	4
Platter.....	5
Platters' base.....	6
Drive unit.....	7
Additional parts.....	8
Q & A and Troubleshooting.....	9, 10, 11
Disclaimer.....	12

Specifications

Brand: Small Audio Manufacture

Name: Sinner

Type: Belt drive

Weight: cca 33 kg

Material: MDF, aluminium, oak, steele, brass

Drive: DC synchronous, 110-230V

Drive type: separated


Speed: 33.3 / 45 rpm

Platter: Ballanced




Bearings: glycodur

No. of tonearms supported: 4

General Overview

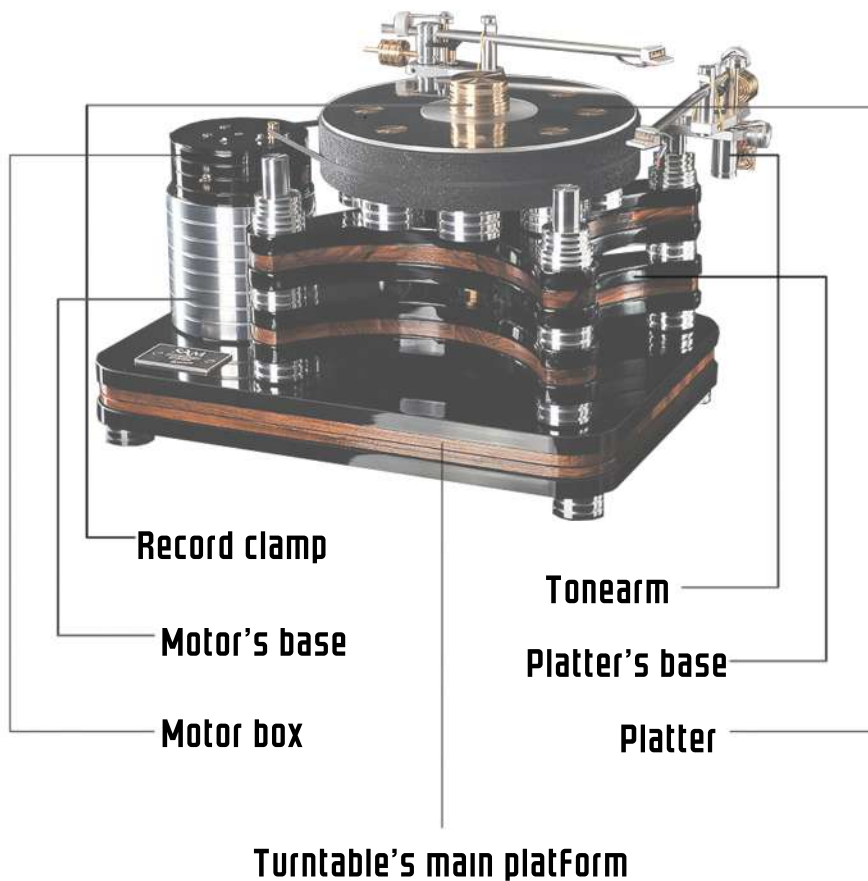

Lifting up the turntable

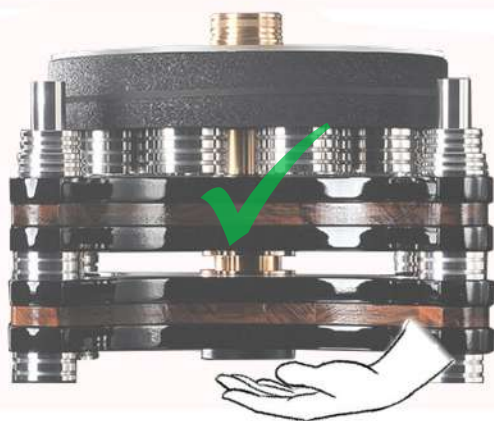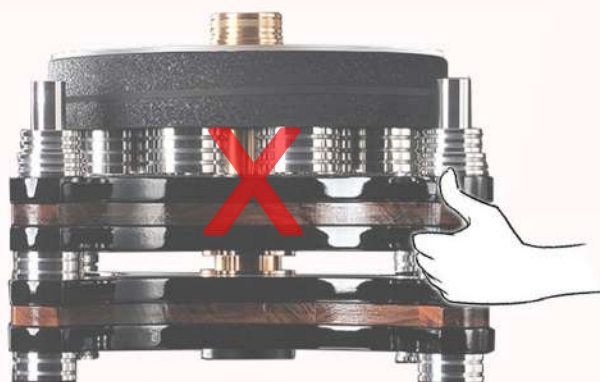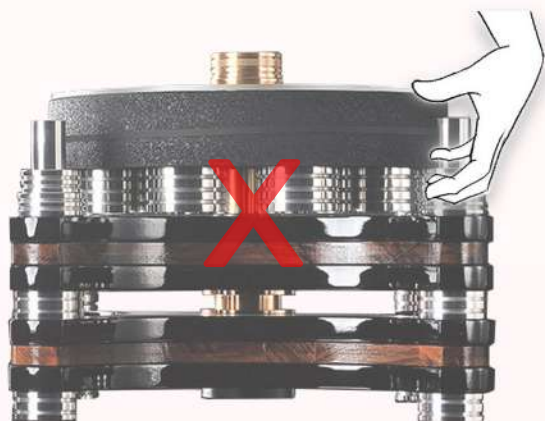

Platter



Spindle

Platter's upper weights (material: brass)


Platter (material: MDF, diameter cca 300 mm, ballanced, weight; 8 kg, height: 55 mm)



Platter's main weights
(8 pieces, rotating, material: aluminium)

Powerful main axis (Ø20, material: steel)

Platter's base

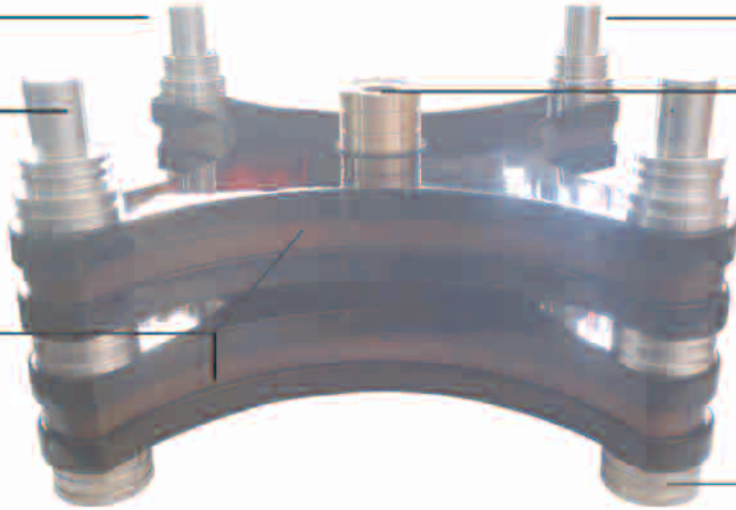

Main shaft (with a bearing at the bottom)

Platter's base (material: oak,MDF,aluminium,weight:8kg)

Mounting stand for tonearm's base

Mounting stand for tonearm's base

Mounting stand for tonearm base's base


**Base Feets (can be used as a balancing tool,
material: aluminium)**

Drive Unit



Motor base (material: aluminium, weight: 8 kg, height 195 mm)

Motor box (material: steele,electronics: DC motor, synchronous, power supply 10-230V, 12V)

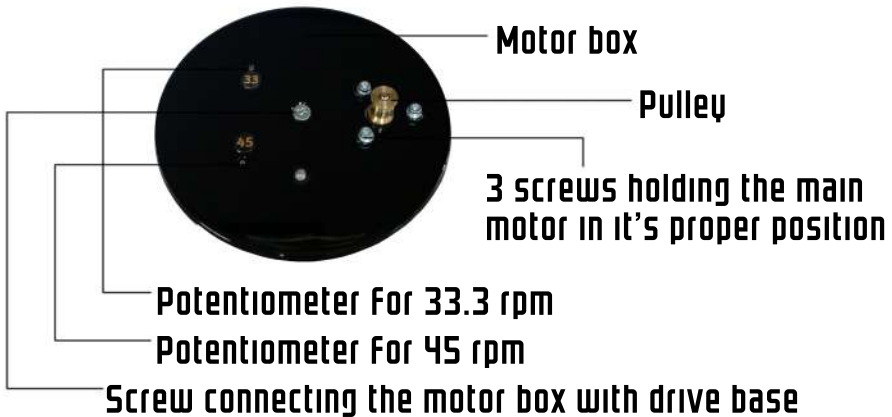

Power switch
(3 positions, 33.3 rpm up, middle OFF, 45 rpm down)

Additional parts



Record clamp

(height: cca 30 mm, \varnothing 65, weight cca 400 grams, material: brass)



Turntable main platform (length 52 cm
depth 38 cm, weight 9 kg, material: MDF, oak)

Main platform Feet (must be equally ballanced,
can be used as a ballancing tool, material: aluminium)



Record matt

(\varnothing 300 mm, thikness 0.4 mm, transparent, material: acrylic)

Q & A & Troubleshooting

My turntable arrived damaged. What can I do?

Please contact us as soon as possible at sam-audio.eu or at smallaudiomanufacture@gmail.com

What's the distance between the motor unit and the turntable?

The distance should be between 0,5–1 cm. Over time, when the belt gets worn out, the distance can be higher.

What's transparent plexi needed for? Do I have to use it?

We, in Small Audio Manufacture, believe that the acrylic matt is the best matt of them all. But it's customer's choice to use any other matt he wishes so. We do NOT advice to use the turntable without the matt as the surface of the platter could damage your records.

I can not set the correct and constant speed. Please help!

Step 1: Please check if the your distance from the the turntable to the motor unit as suggested. If a motor unit is too far away, it could cause too much tension on the pulley which could lead to unstable speed.

Step 2: Please check if all of your tonearm parameters (such as spindle to center distance, tracking force etc) are all properly set

Step 3: Please check the three screws around the pulley. Sometimes, some of them can get loose during the transport which could lead to the main motor not being in it's proper position.

Q & A & Troubleshooting

If that's the case, detach the motor's unit from its base and check from the inside if all the 3 screws are tight enough.

Step 4: Open up the motor box and check if all the wires are connected.

Step 5: Detach the platter from its base and check if there's enough oil in the main shaft.

The motor is loud and there is too much noise. What can I do?

Most of the turntables with belt and separated drives have a little noisier motors. But of course, there should not be notable and disturbing noise while one's listening to music or sitting in his sweet spot. If a motor is too noisy and interrupting the process of listening to music, please take the screwdriver and spin each of the 3 screws around the pulley, left or right, until you reduce the noise. Sometimes, these screws can get disturbed in the transport and it requires a certain tweeking and adjustments after the turntable arrives to its destination.

My speed is stable and constant but not a correct one. Why is that?

If your speed is stable but not 33.3 or 45 RPM, that means that the right speeds are not set on the potentiometers. Take the small screwdriver and set the correct speeds using the stroboscopic disc or any other appropriate device or a software.

I've turned the power on, but the platter is not moving. Why?

Step 1: Please check if perhaps the potentiometers are set to zero.

Q & A & Troubleshooting

Step 2: Please check is pulley spinning.

Step 3: Are there enough oil in the bearings? Some countries have a very strict and rigid liquid custom policy so it is possible that all the oil was removed by custom's officials. If there's no oil, please refill it to a 1/3 of the shaft.

What oil should I use on my turntable and how often?

Re-oiling of the turntable is only required 1-2 times during a lifetime. While there are many expensive oils on the market, we at Small Audio Manufacture believe that a simple oil for gear drives of vehicles (like Hipenol GTL SAE 90) are perfectly fine.

Turntable arrived, all is well, but there is some leakage of the oil. What should I do?

Sometimes, the packages might get flipped over in the transport so some leakage might occur. If that's the case take a piece of rug and gently remove the spilled oil.

My speed was alright but I moved the motor unit or the turntable and now the speed is different. What I did wrong?

Every physical movement of the motor unit or the turntable means that the distance between the motor unit and the turntable is changed and such change requires setting the right speeds on the potentiometers once again.

**For any further issues please contact us at
smallaudiomanufacture@gmail.com**

Disclaimer

In case of any modification or altering of the S.A.M. products (such as re-painting the platter to another color, changing of the electronics, dismantle of the tonearm or any other part or any other similar operation), S.A.M. **does not** have any responsibility in possible malfunction or damage that may occur as a result of such actions. S.A.M. also does not share, cover or refund the costs of possible repairs or setup installation by outside parties (such as various tool makers, audiophile experts etc.) unless agreed upon. All the questions, issues or problems must be addressed first and foremost directly through Small Audio Manufacture at www.sam-audio.eu or smallaudiomanufacture@gmail.com or call us at 00385958513607.

S.A.M. also hold rights for possible minor changes (such as colors, dimensions or shapes) in final production, that may differ from the actual product being advertised.

All Small Audio Manufacture products have 3 years warranty on electronics and 5 years warranty on all other parts.

Thank you for your understanding.
Yours truly,
Small Audio Manufacture